



CR200 CRIMP TOOL

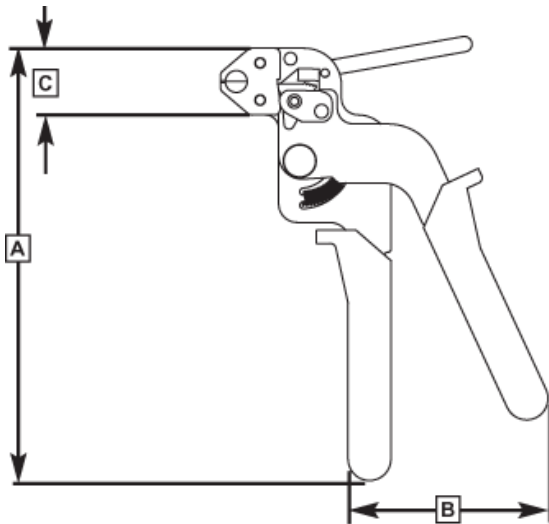

Technical Information

- A. Length: 8.5"**
- B. Handle Distance: 4.0"**
- C. Tension Head Height: 1.3"**

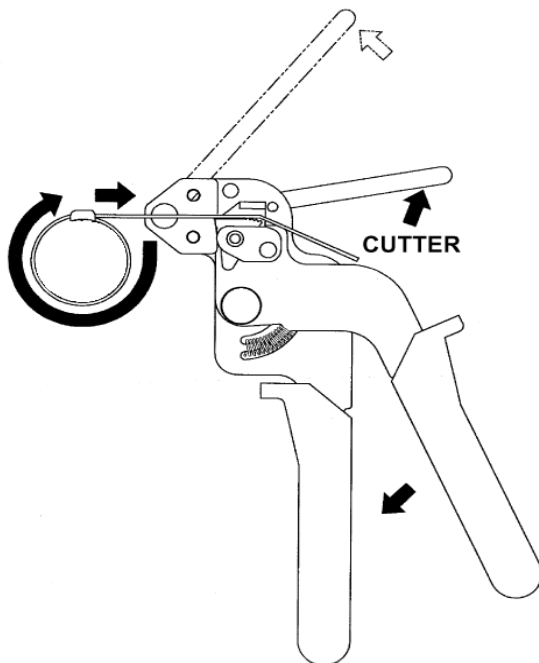

Instructions

- 1. The band should be looped around the hose or pipe. Thread band through the seal. Pull the band tight by hand as far as possible.**
- 2. Place the tool on the band as shown.**
- 3. Squeeze the handles as many times as necessary to tighten the band to the required tension.**
- 4. While maintaining the final tension from the squeeze process, lift up cutter handle until the band tail is cut off. Remove the cut-off band piece from the baby tool.**